


# GLIDER SLOTS AND TABS

## ROBOT HEAD

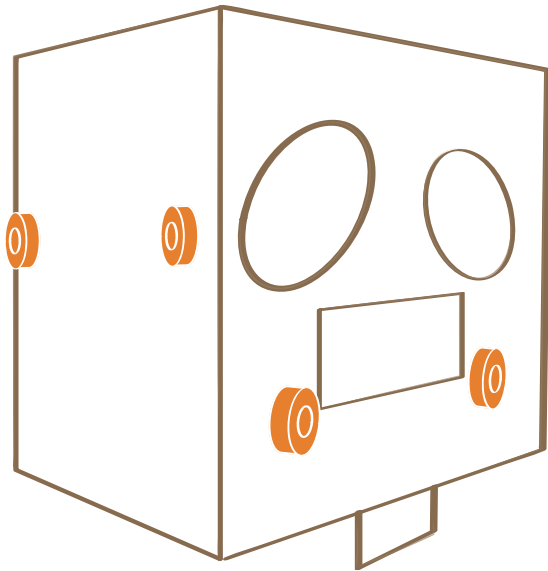

### SUPPLIES




6 bolts



6 nuts



### STEPS:

1. Cut out the mouth piece with 2 slider slots

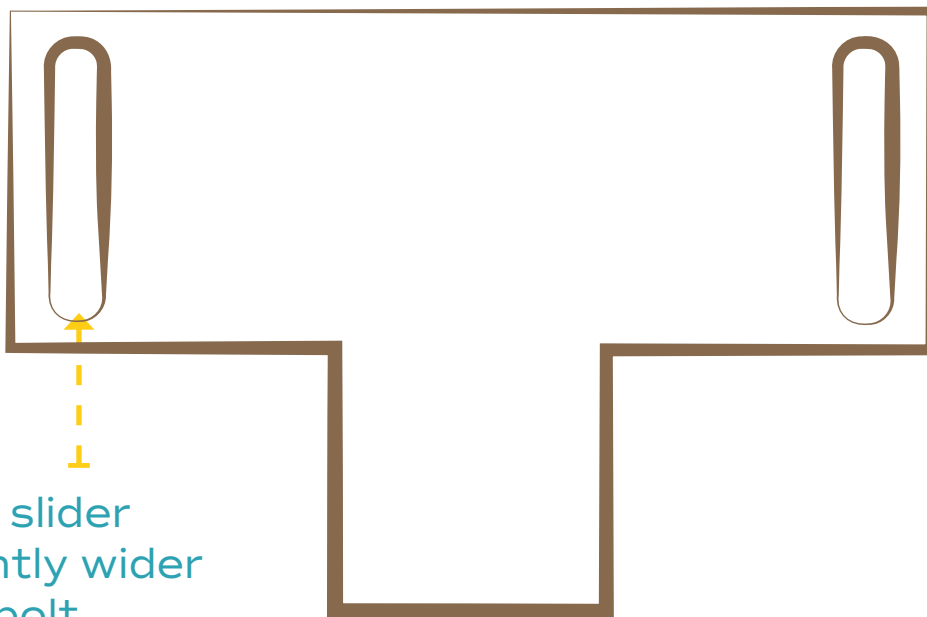


Make the slider slots slightly wider than the bolt

2. Connect the bolts through the mouth slots and back of the face

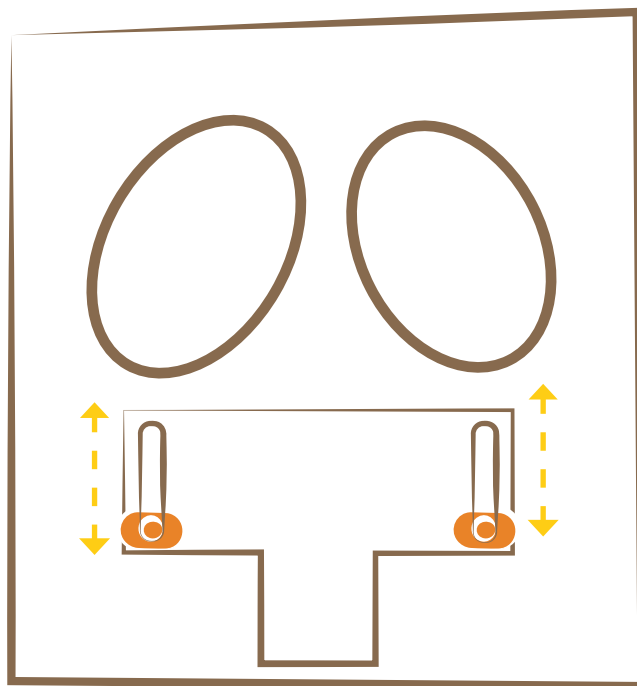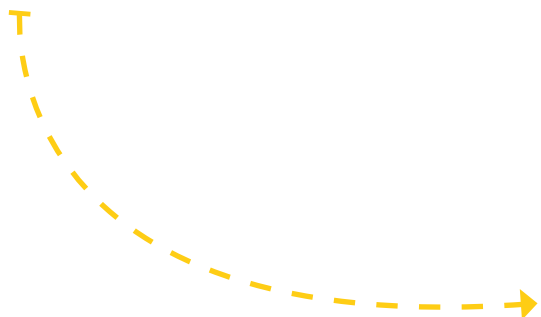

3. Connect the front and back tabs to the body with bolts

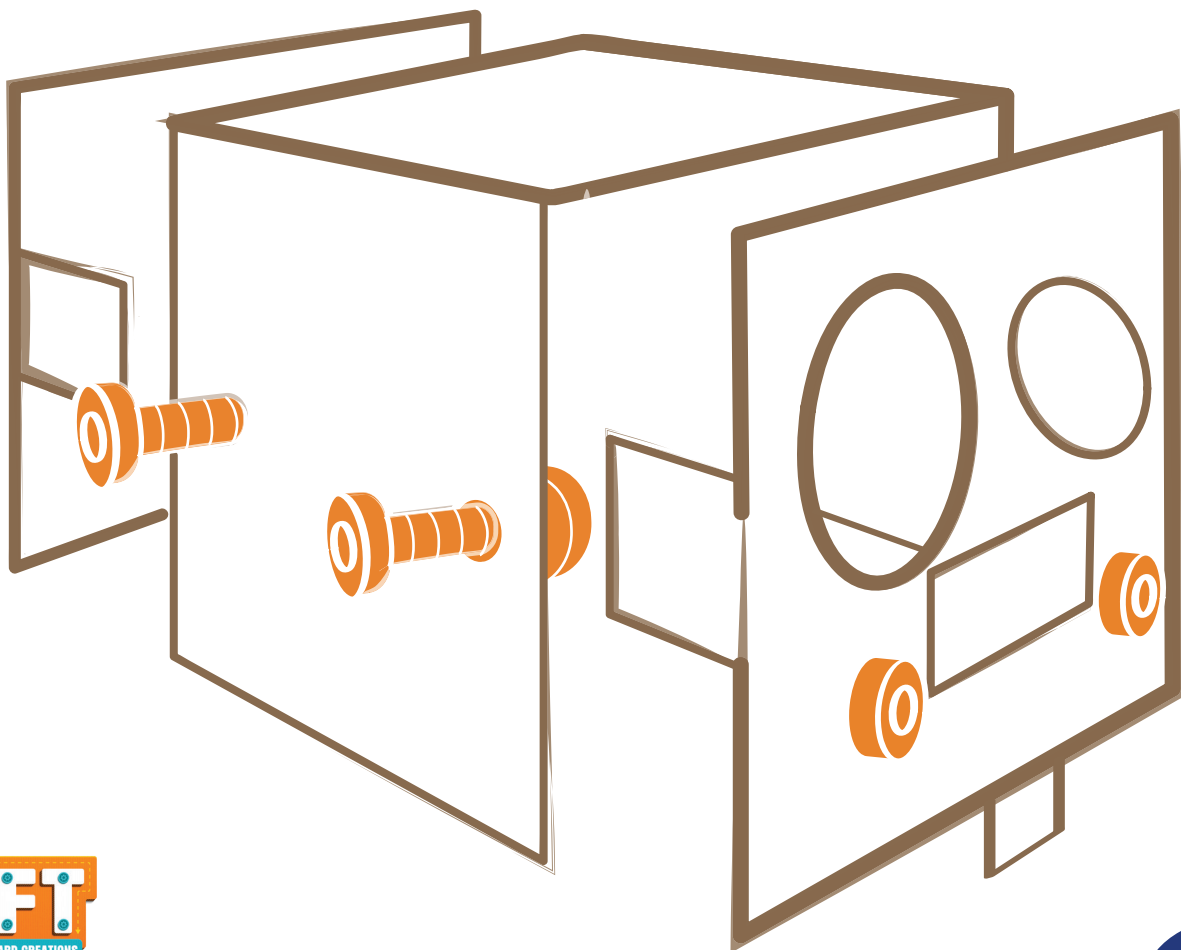

[www.crexo.com/swift](http://www.crexo.com/swift)

©2026 Swift Cardboard Creations.  
All rights reserved.

